


SMW 600MHz VCO Data Sheet

Output Frequency & Power

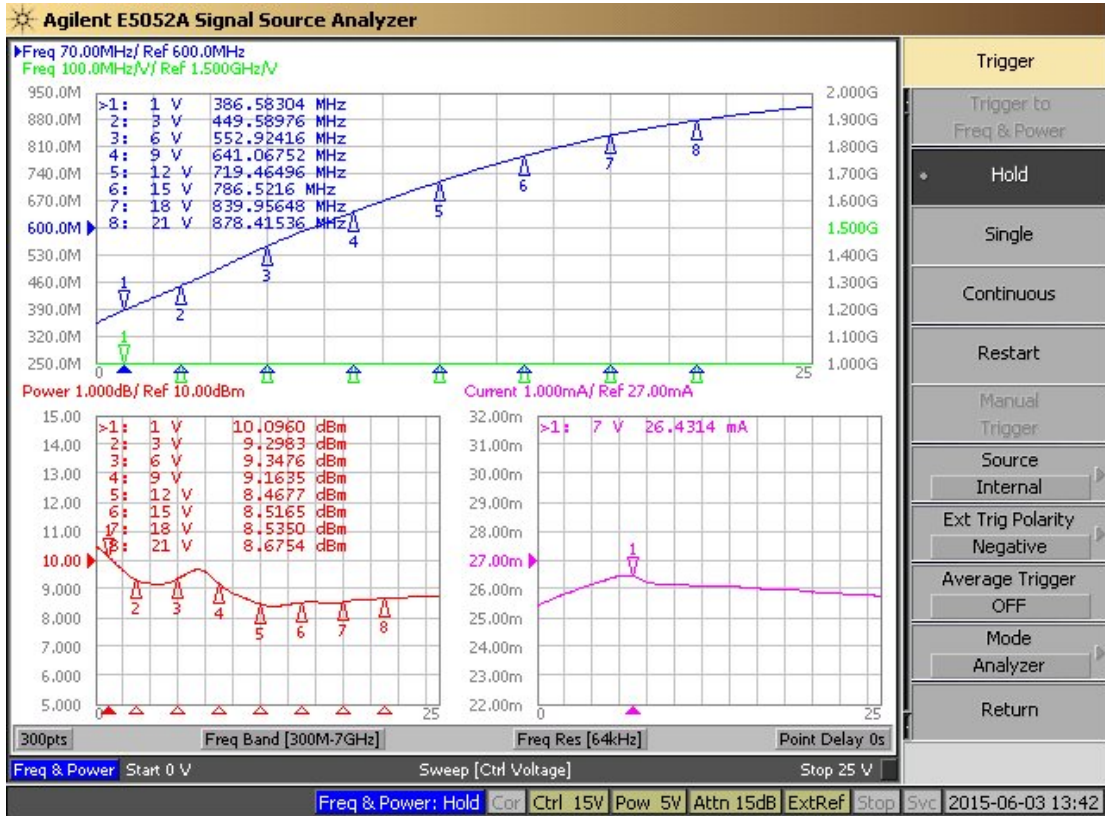

Trigger

Trigger to Freq & Power

Hold

Single

Continuous

Restart

Manual Trigger

Source Internal


Ext Trig Polarity Negative

Average Trigger OFF

Mode Analyzer

Return

Phase Noise (Vt=3V)

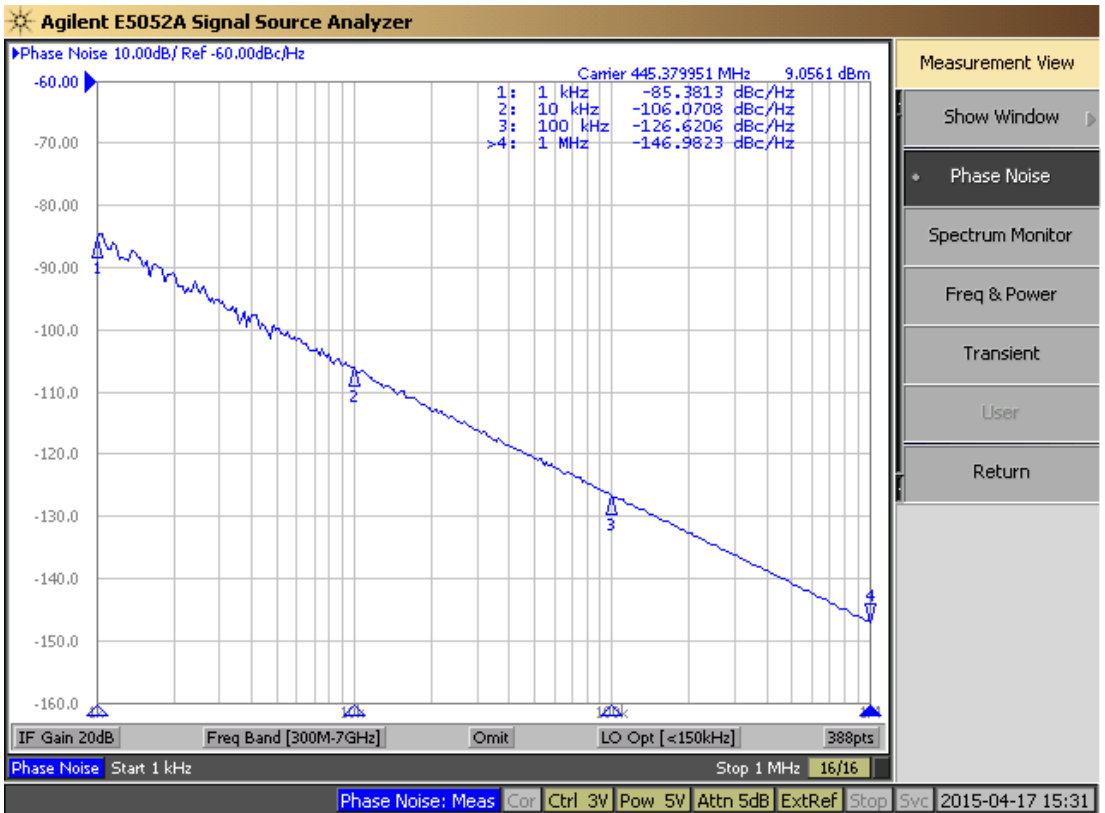

Measurement View

Show Window

Phase Noise

Spectrum Monitor


Freq & Power

Transient

User

Return

位相雑音 (Vt=8V)

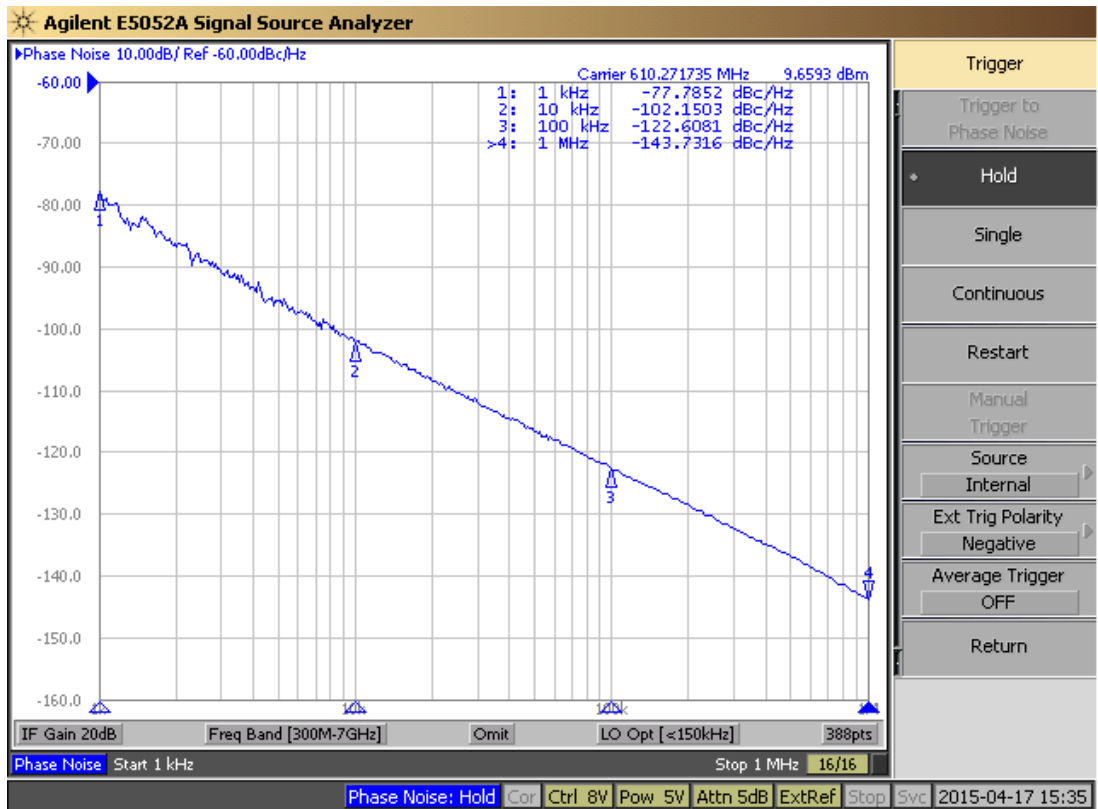

Phase Noise (Vt=16V)

